




# Asus X555LA-SI305041 Battery Replacement

This guide will give you step by step instructions to replacing the battery on the Asus X555LA laptop.

Written By: Garrett Doll

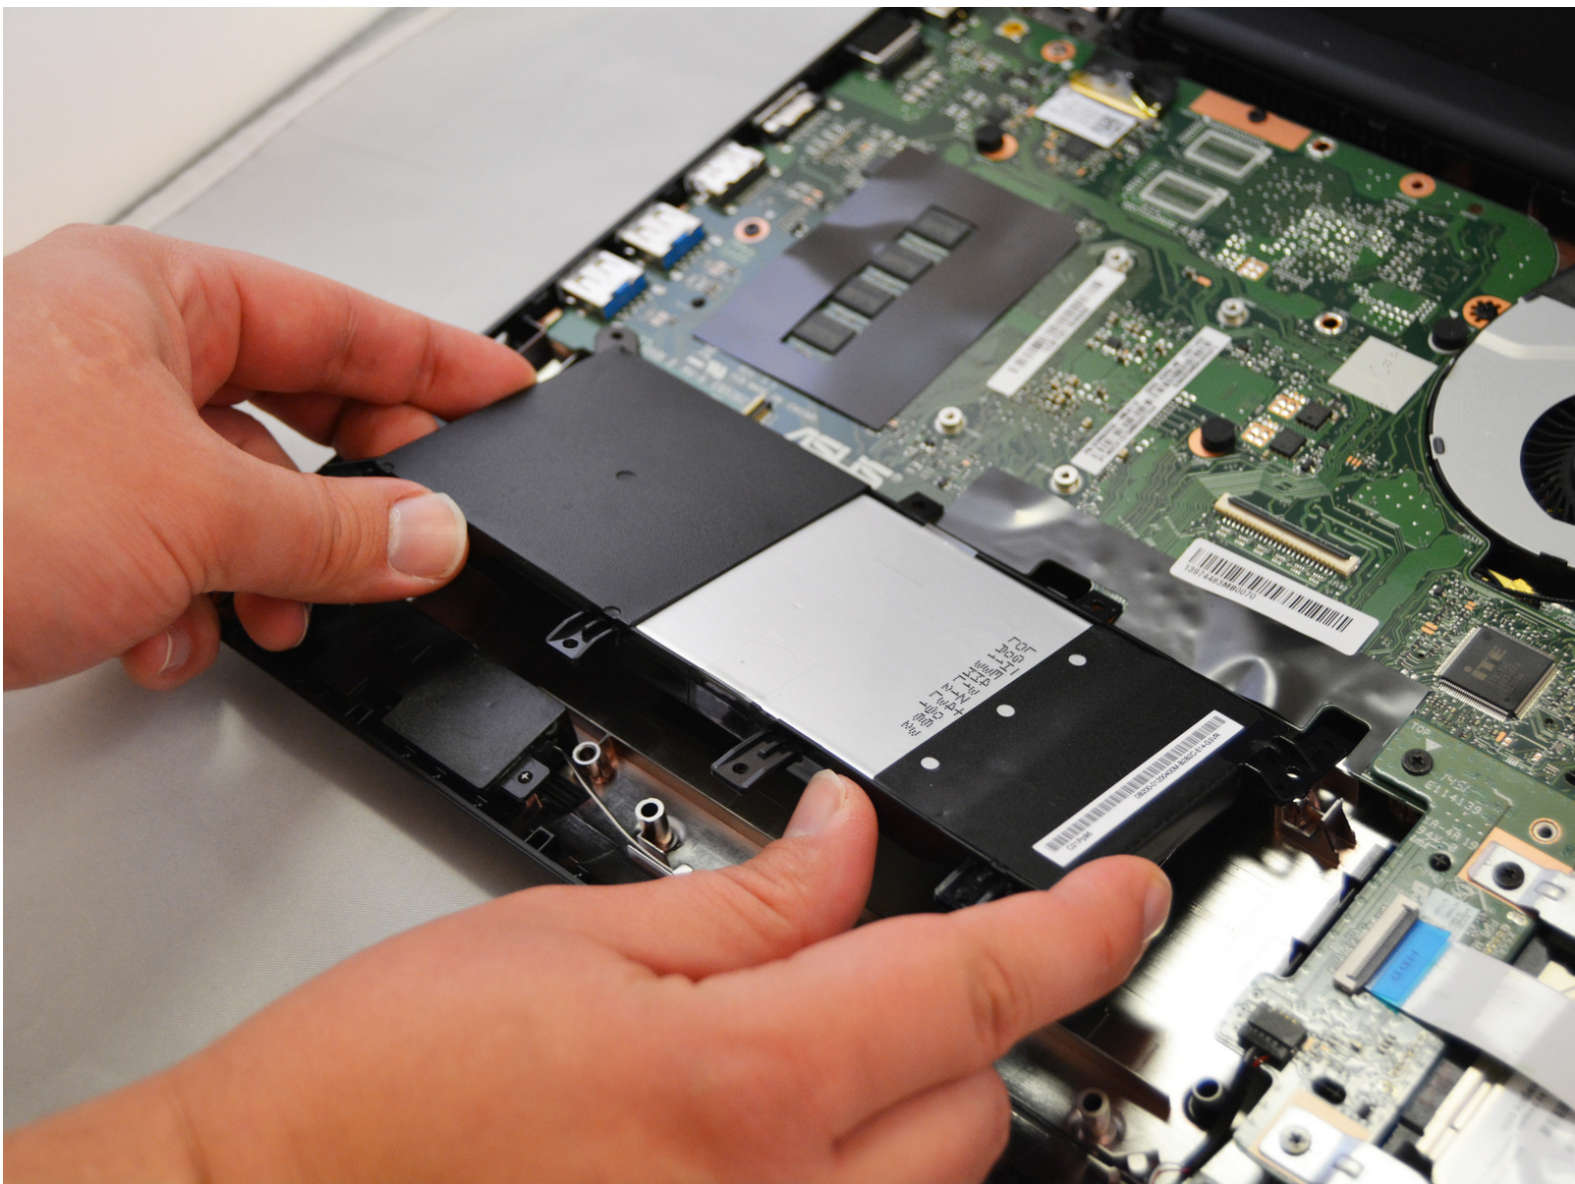

## INTRODUCTION


This guide will step you through replacing the battery in the Asus X555LA.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard Assembly

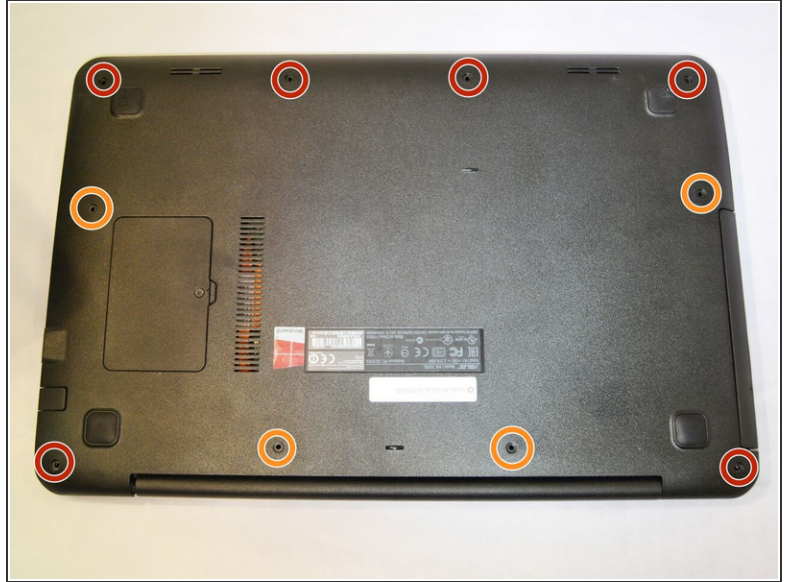

- Use a #0 Phillips screw driver to remove the 90mm screws from the outer case (6 screws).
- Use a #0 Phillips screw driver to remove the 1.1cm screws from the outer case (4 screws).


## Step 2



- Use the plastic opening tool to separate the keyboard from the bottom cover.
  - Start by prying on the front of the laptop.
  - Continue prying around the cover and end just under the screen to release the front cover.
- ⚠ The keyboard assembly is not fully released until steps three and four are complete.




## Step 3

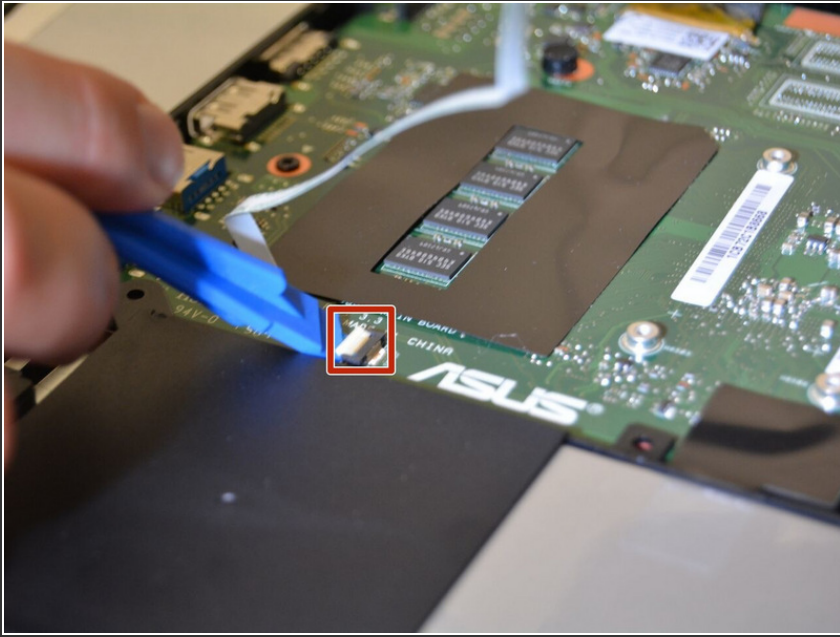

- Flip up the small white tab with the plastic opening tool.
- This will release the lock
- Gently remove the white ribbon cable.

## Step 4

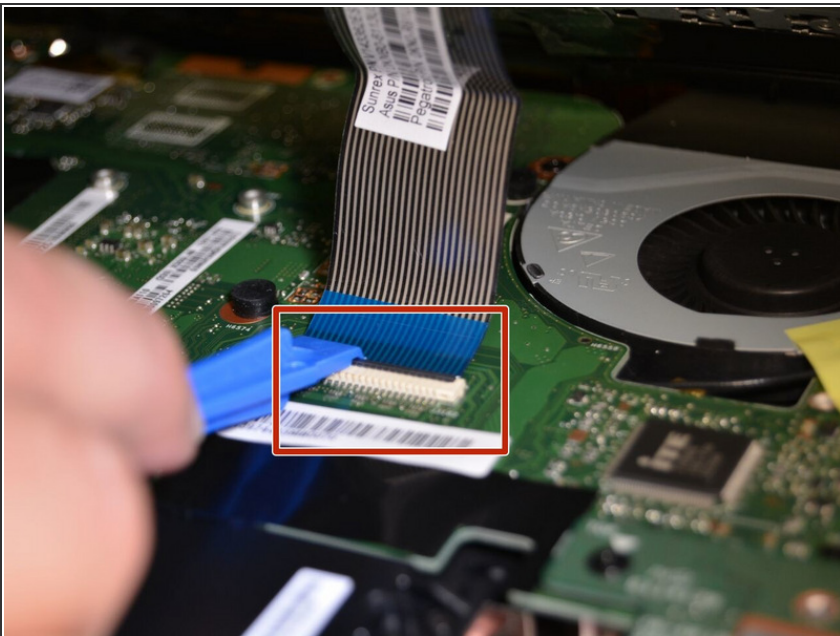


- Flip up the gray tab with the plastic opening tool to release the lock.
- Gently remove the black and blue ribbon cable.

## Step 5



- You can now fully remove the keyboard and front panel to gain access to the inside of the laptop.

## Step 6 — Battery

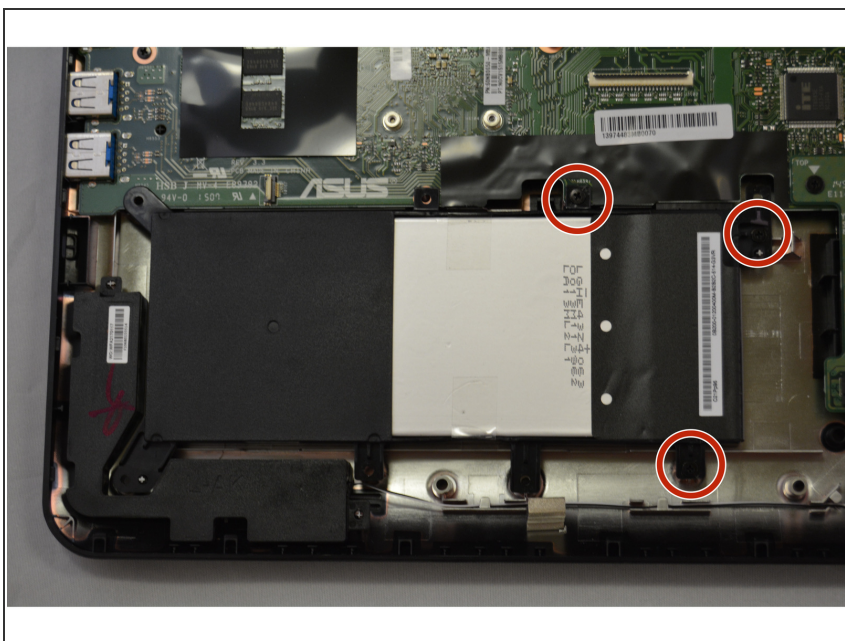

- Remove 3, 50 mm screws around the battery using a #0 Phillips screw driver.

## Step 7



- Gently remove battery from casing. The battery should remove easily.
- Replace with new battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 12:41:30 AM.